

 


 
OPERATING INSTRUCTIONS FOR THE ANSCO DUALET PROJECTOR

The Ansco Dualet projector will project both 35mm and 2 $\frac{1}{4}$ " square transparencies. It is air-cooled to protect transparencies. It has a storage compartment which holds about 40 mounted slides.

Remove the lens barrel by turning it counterclockwise. Carefully clean the front and rear lenses with a soft, clean lintless cloth. Replace lens barrel. Remove packaging screw and wooden block from inside the projector (see special instructions on bottom of projector). While the bottom is off, check these items:

- ✓ Be sure the bulb is tightly in place.
- ✓ Be sure the condensing lenses and heat-absorbing glass are firmly in place. If the lenses are out of place, loosen the screws holding the spring clips, set the lenses in place, reposition clips and tighten the screws.

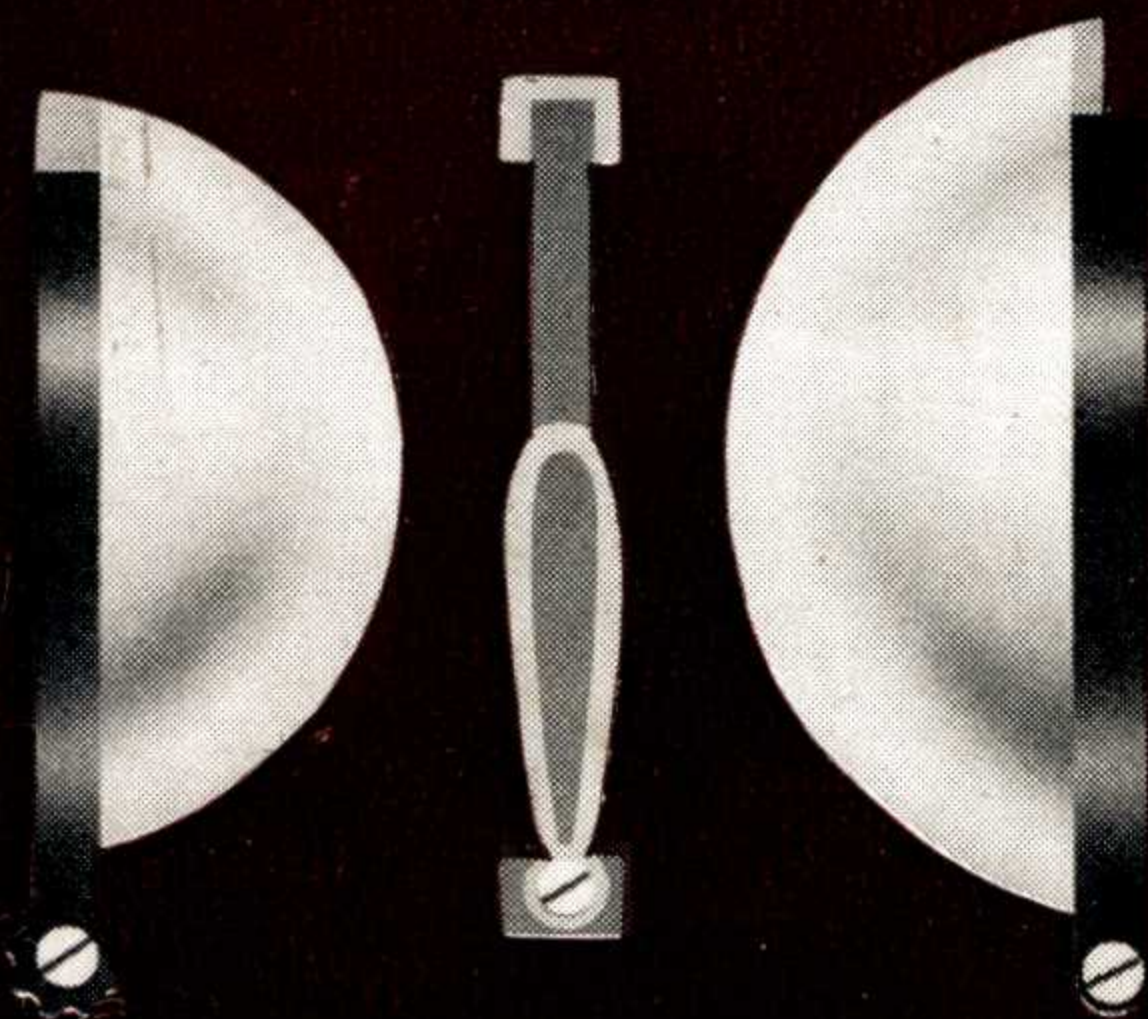

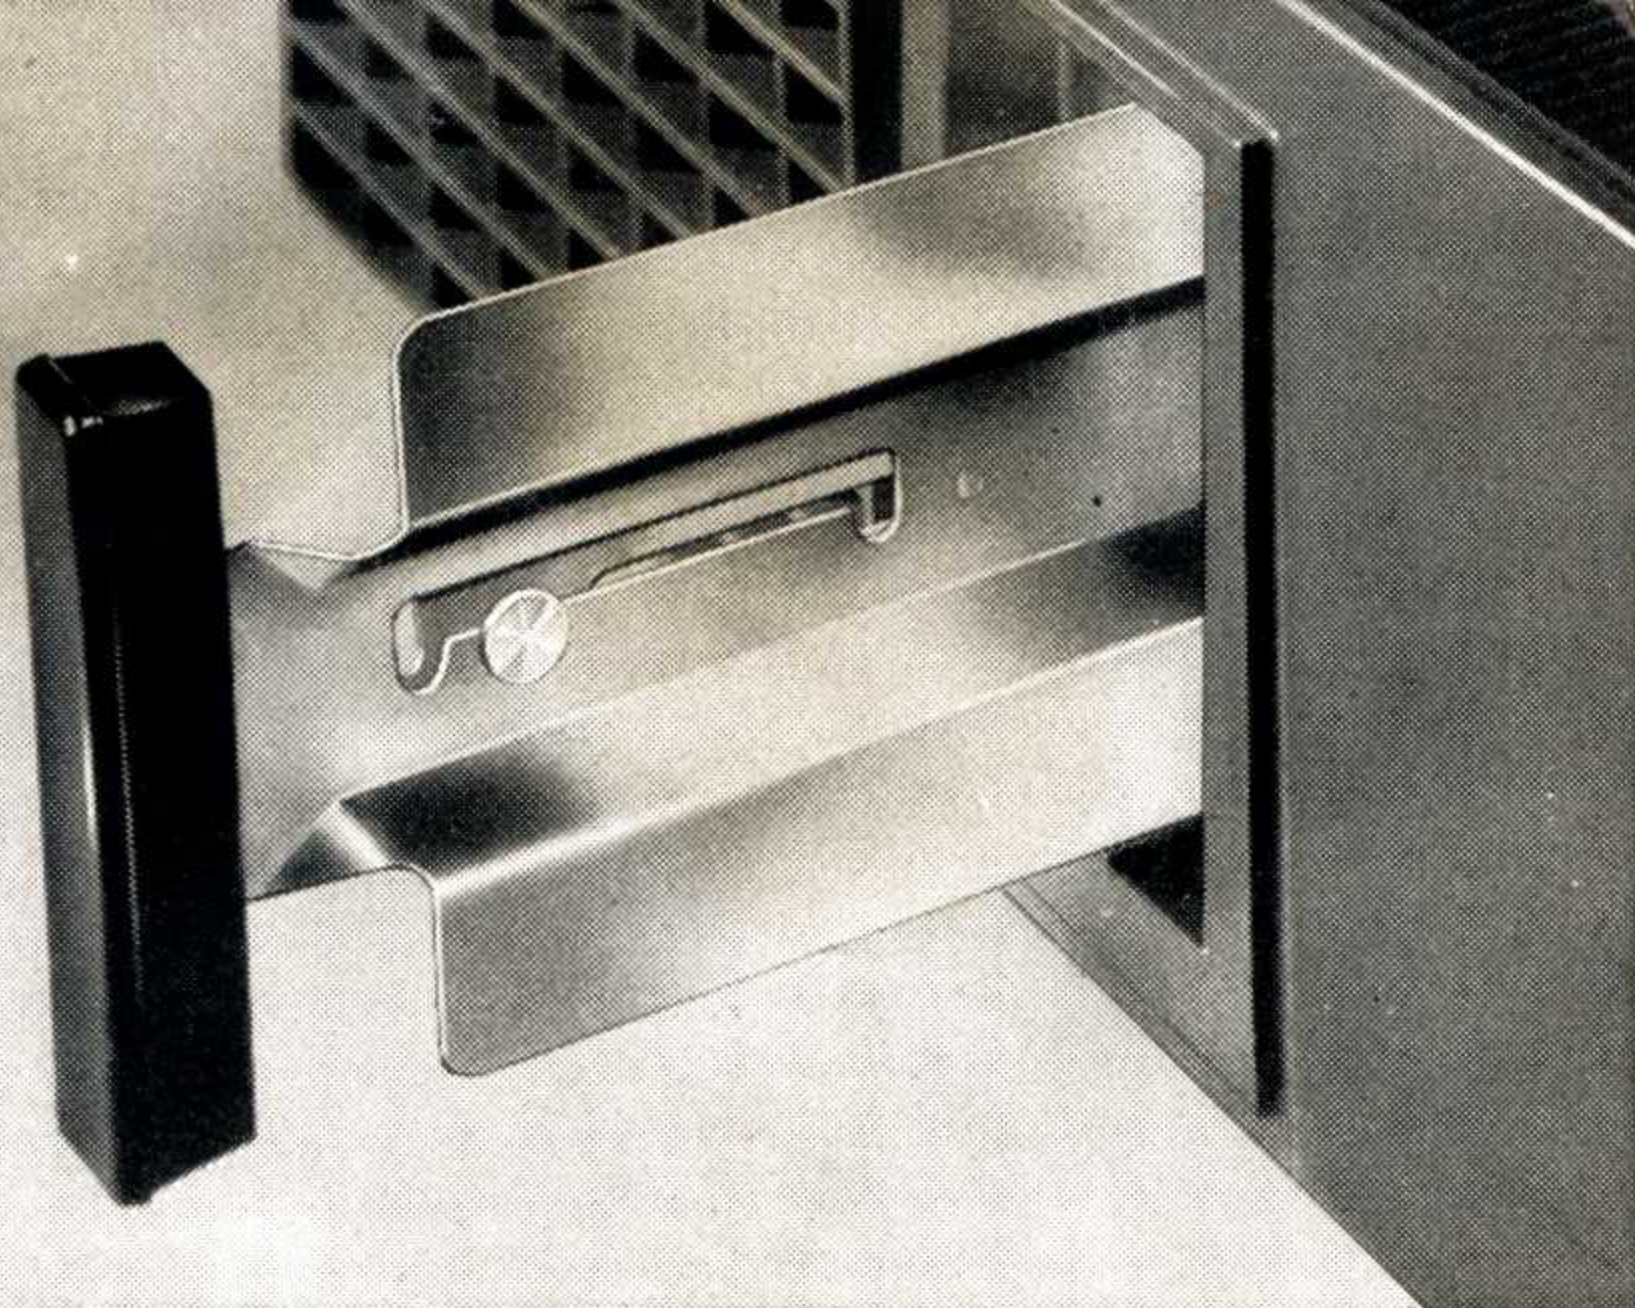

POSITION #2 FOR 2 x 2" SLIDES

The Anso Duolet is completely assembled and is ready for the projection of 2 x 2" slides. Follow these simple instructions for easy operation:

1. Pull the slide changer all the way out.
2. Be sure the shift lock is in the #2 slot.
3. Connect the cord to an electrical outlet. Use *only* with AC current.
4. Slide back the storage compartment cover.
5. Drop your slide into the opening just back of the storage compartment.

Notched slides should be inserted with the notch in the upper right hand corner. Unnotched or glass mounted slides should be inserted so that the image is upside down. You will find it much easier to identify all slides so they can be easily inserted correctly each time.

6. Push the slide changer all the way in and return it to the open position.
7. Pull out the lens barrel until it snaps into place and turn it slowly to bring the picture into sharp focus.
8. The projector may be raised or lowered to center the image on the screen* by turning the knob in the lower center of the front plate.
9. As you drop each slide into the slot and repeat the action described in #6, the slide will change and the preceding slide will come out the other side of the projector.
10. To remove the last 2 x 2" slide from the projector, slip the adapter out of the left side of the projector. This is done by pressing the adapter clips forward and pulling the adapter out. Ease the adapter back into place.

PROJECTING 2 1/4" SLIDES

 
 
With these slight adjustments to the slide changer, 2 1/4" slides are projected in the same manner as 35mm slides:

 
1. Remove the 35mm adapter as described in #10 above.
2. Pull the slide changer all the way out.
3. Place shift lock in the #1 slot.

Follow the instructions for projection of 35mm slides. To remove the last 2 1/4" slide, place the shift lock in #3 slot and push the slide changer all the way in.

** A beaded screen is recommended to reflect all the sparkling beauty of your transparencies.*


POSITION #1 FOR 2 1/4 x 2 1/4" SLIDES

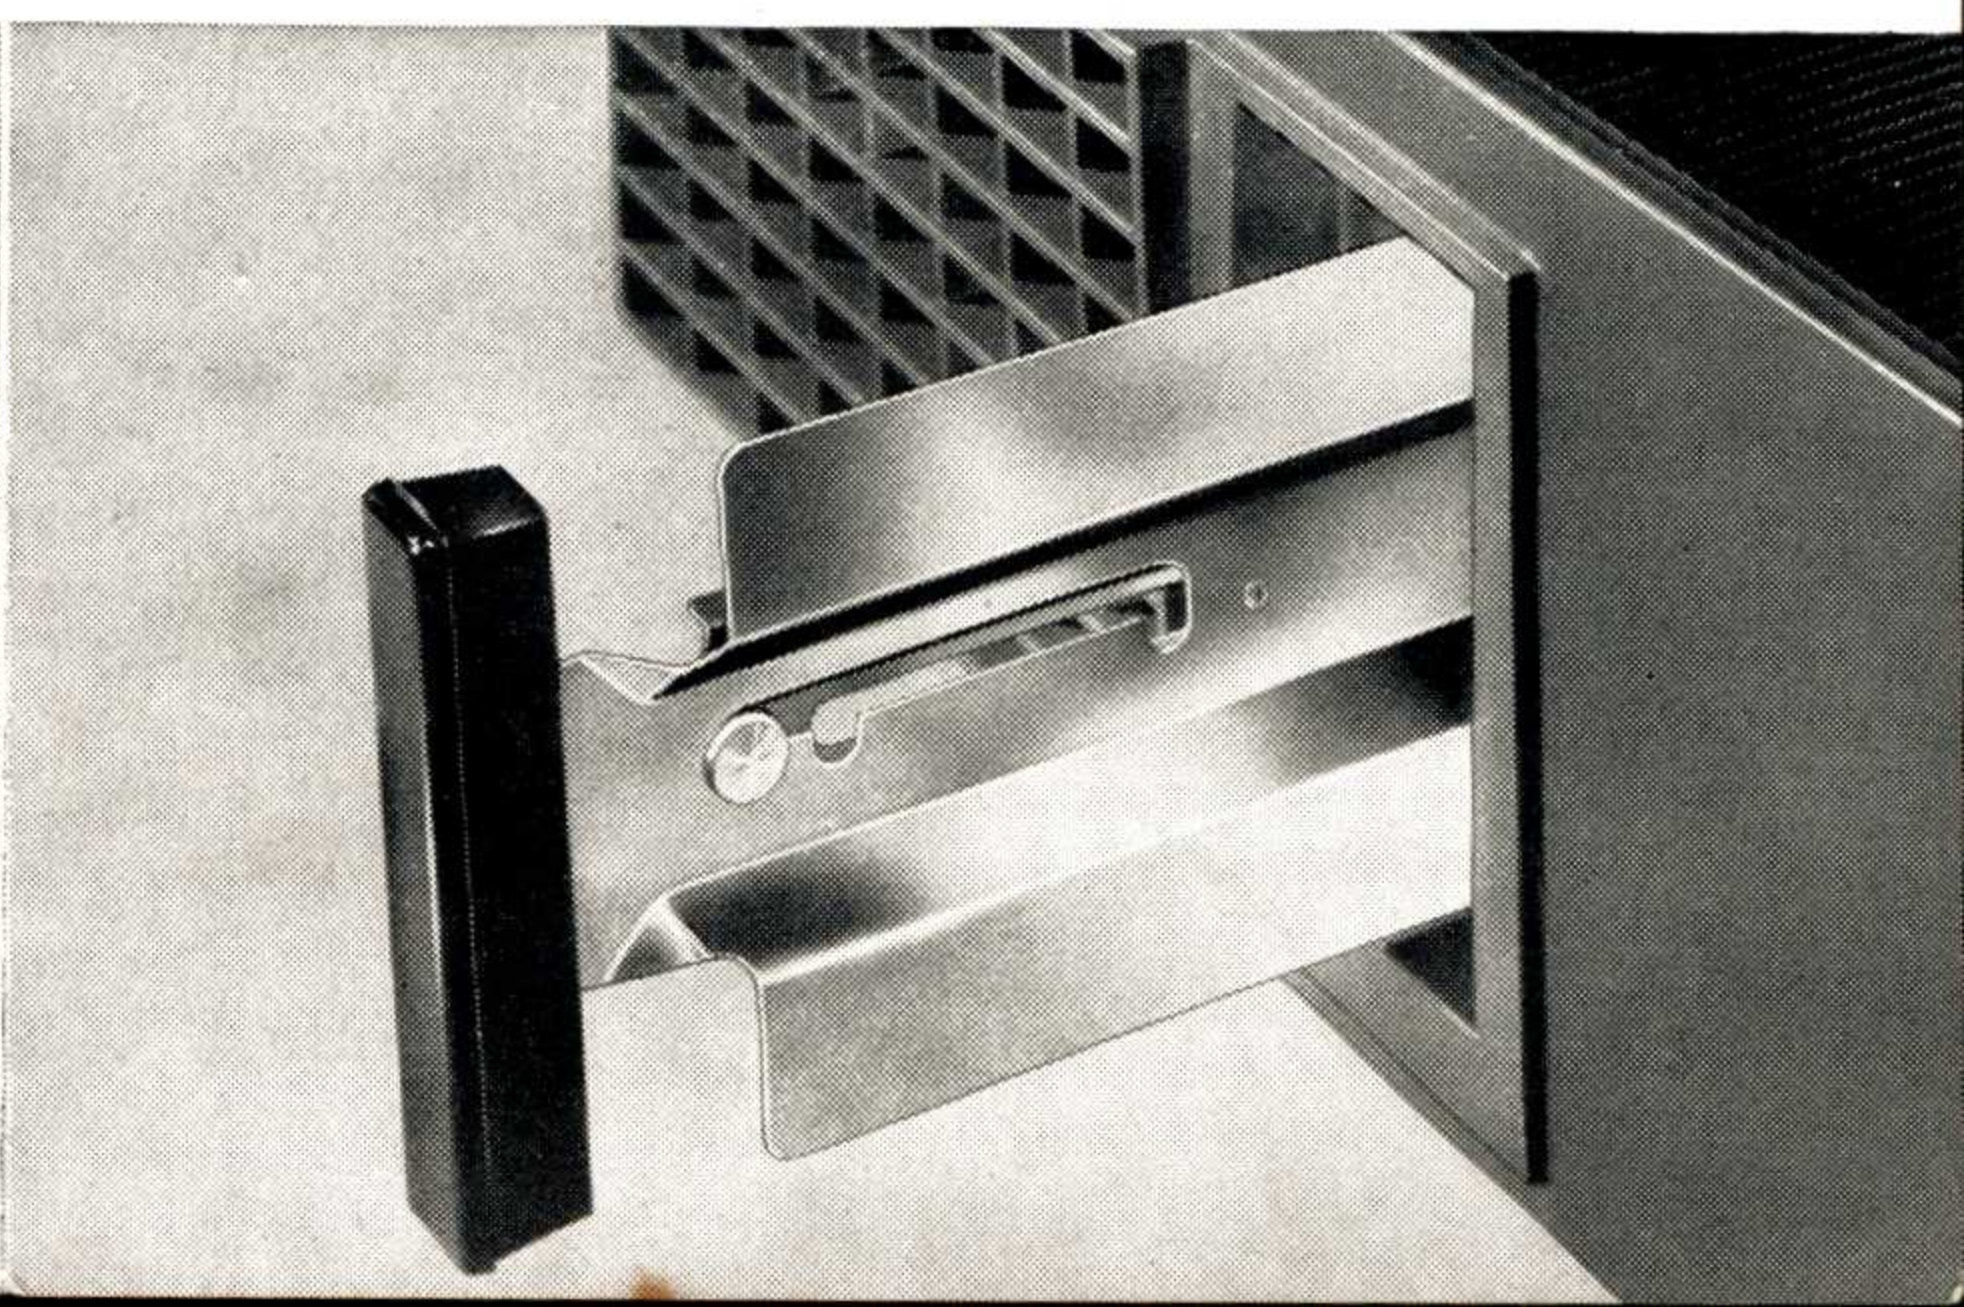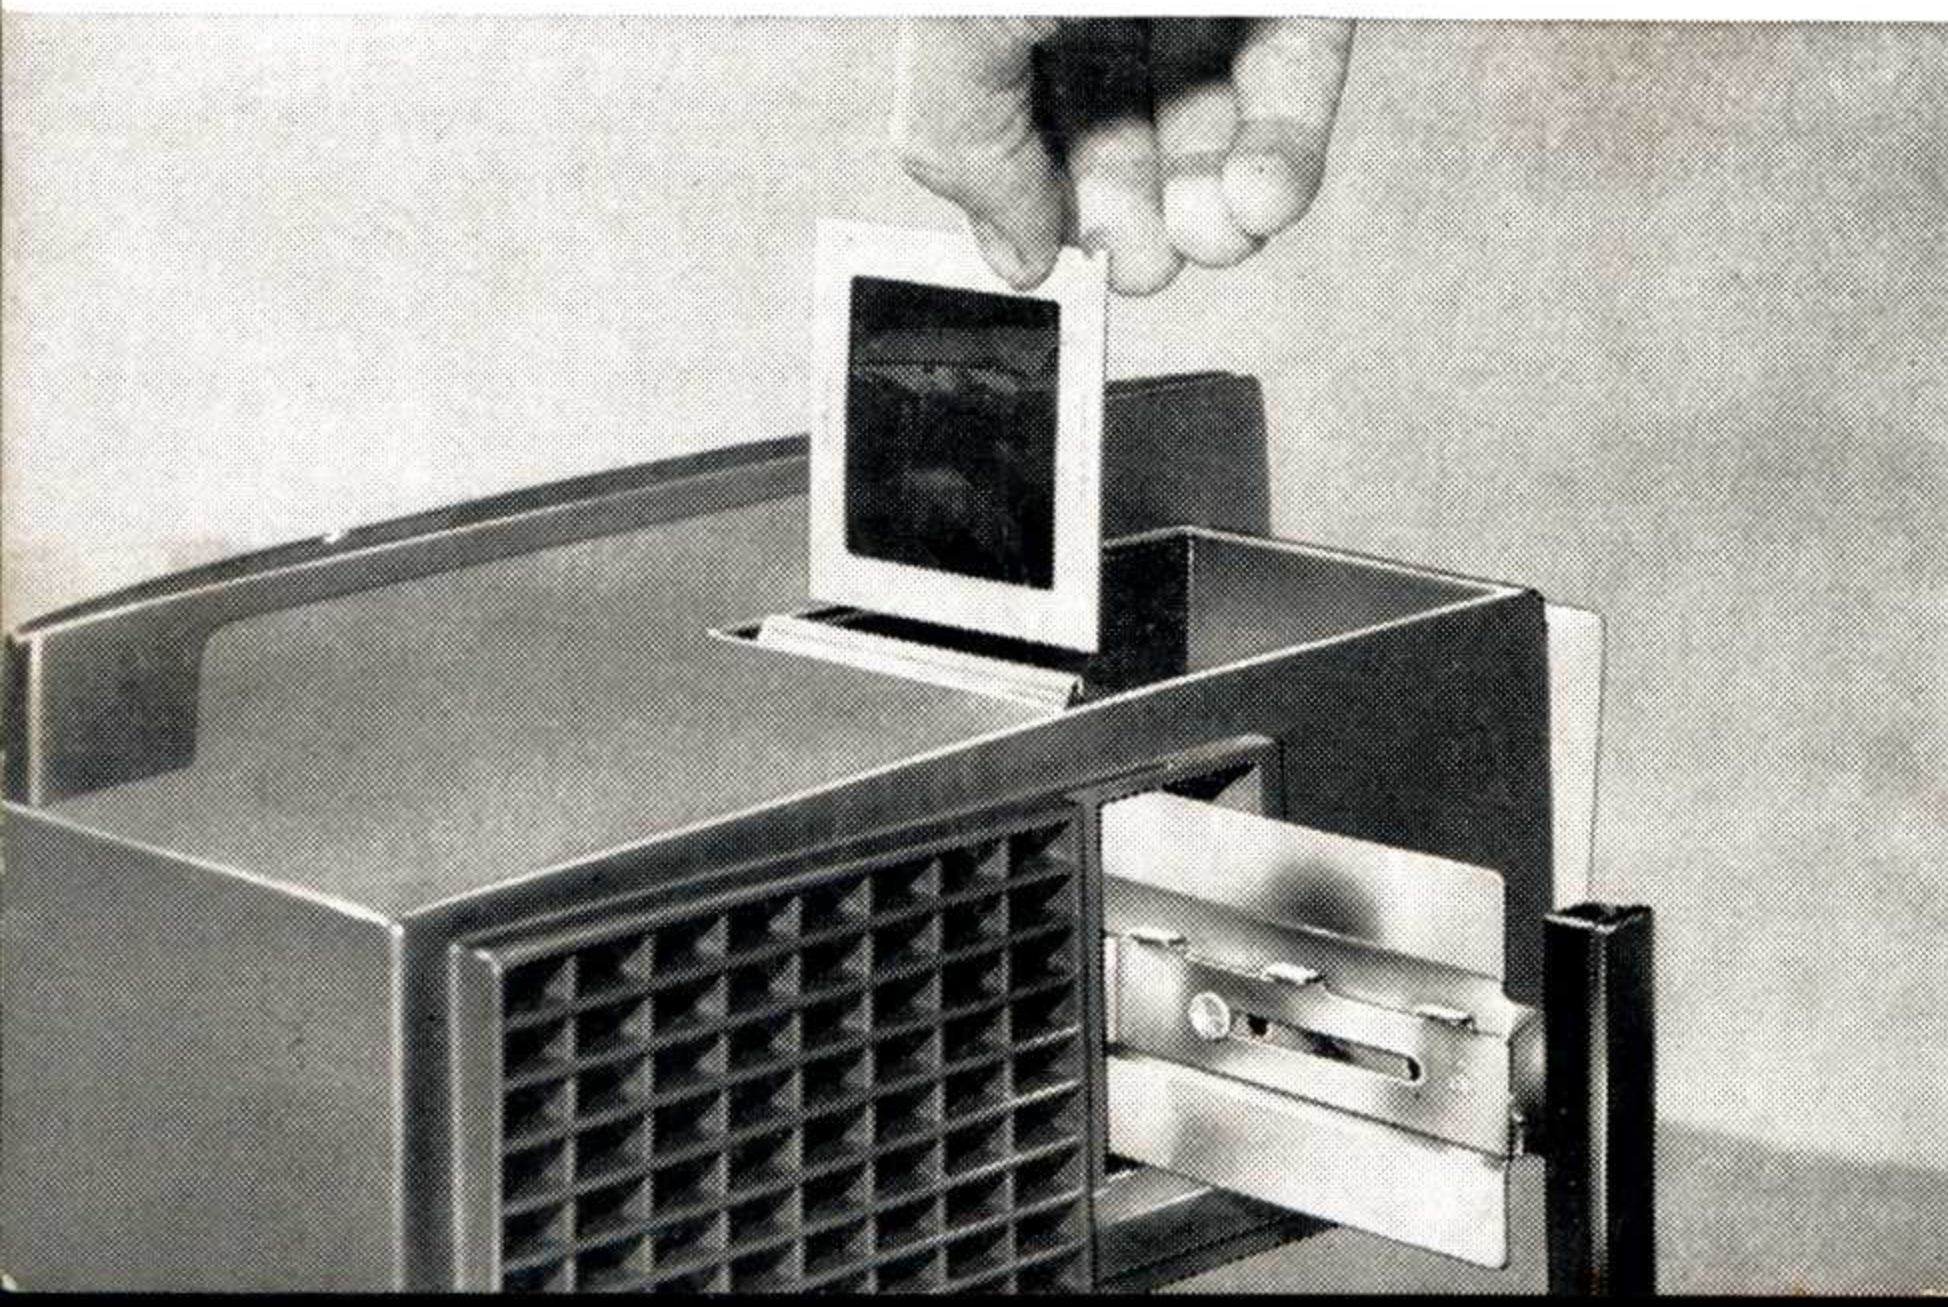

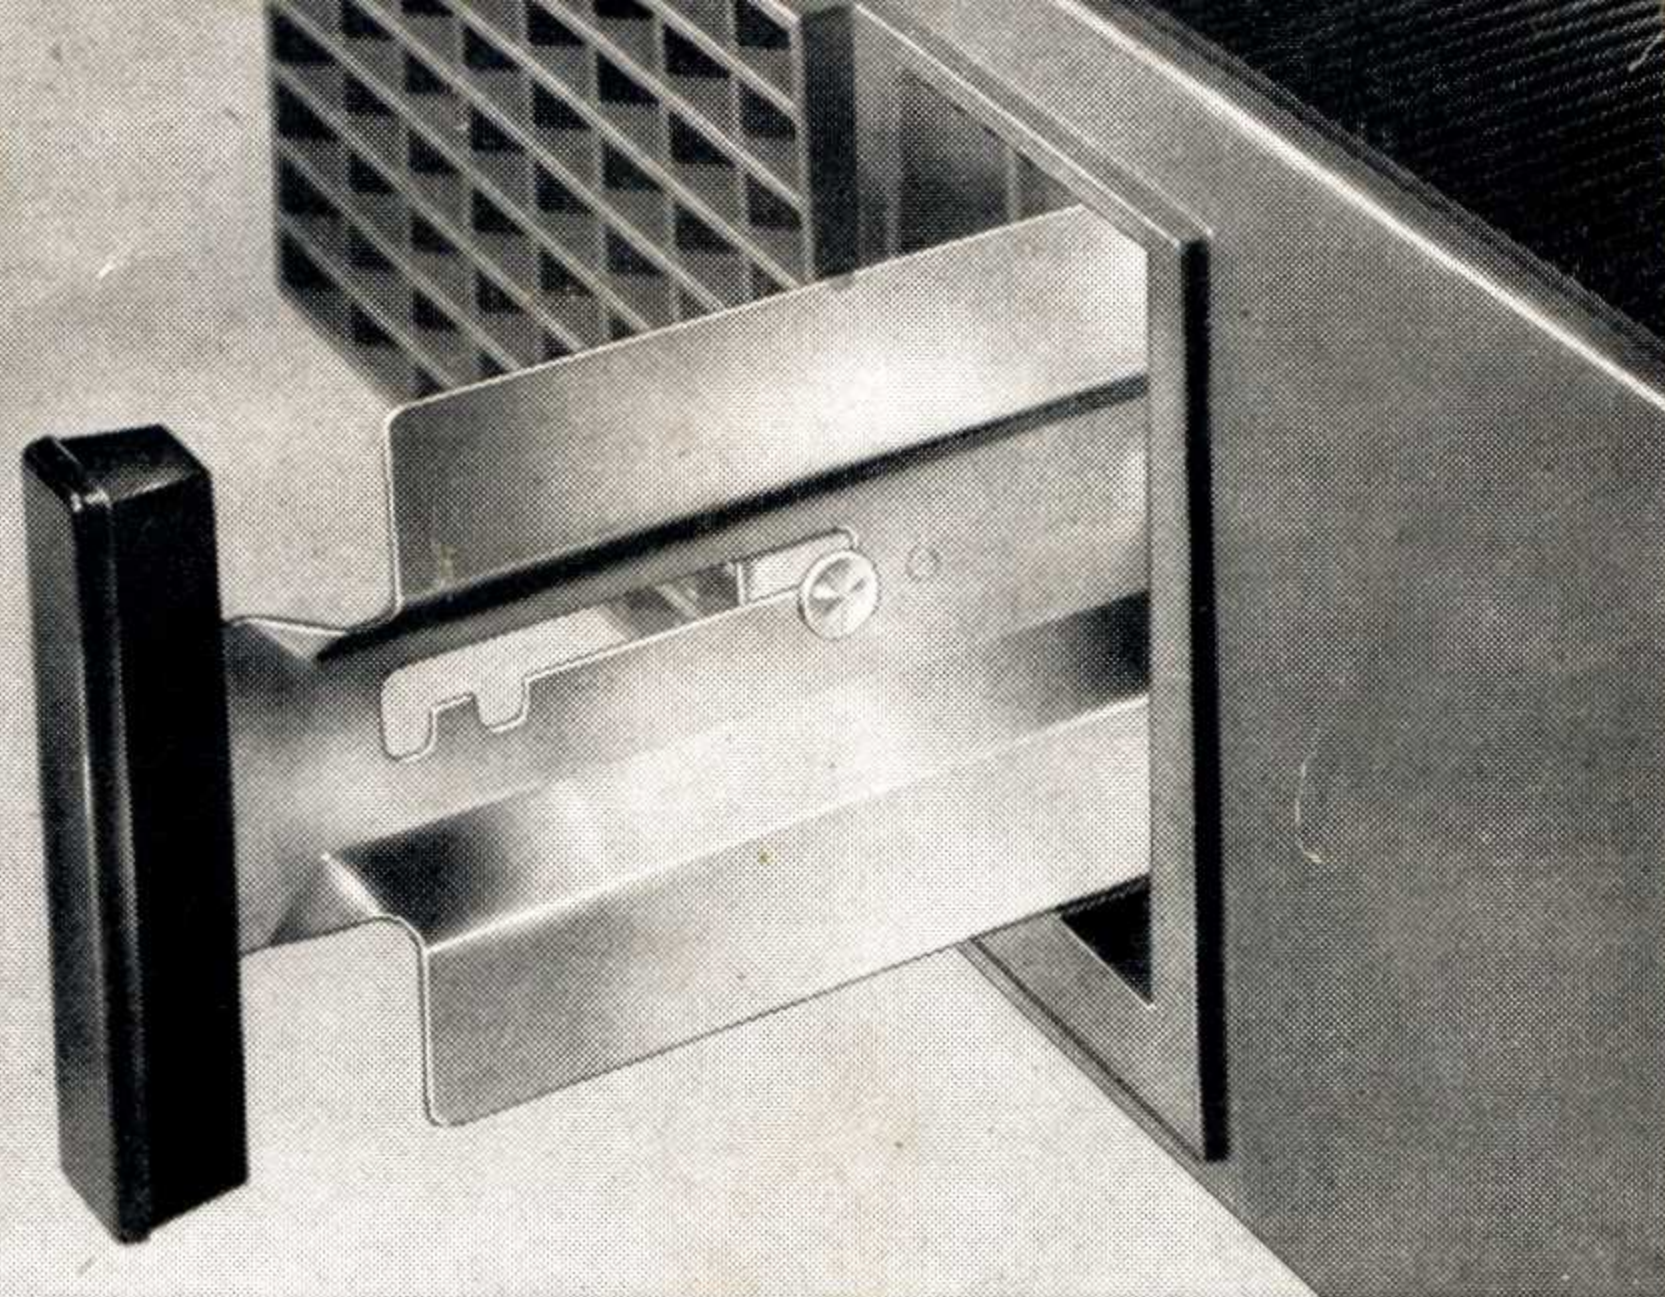

POSITION #3 FOR REMOVING FINAL 2 1/4" SLIDE

 To replace the 35mm adapter, place the shift lock in slot #2. Fit edges of adapter behind springs in slide changer unit and with a slight forward pressure on the adapter, ease it into position.

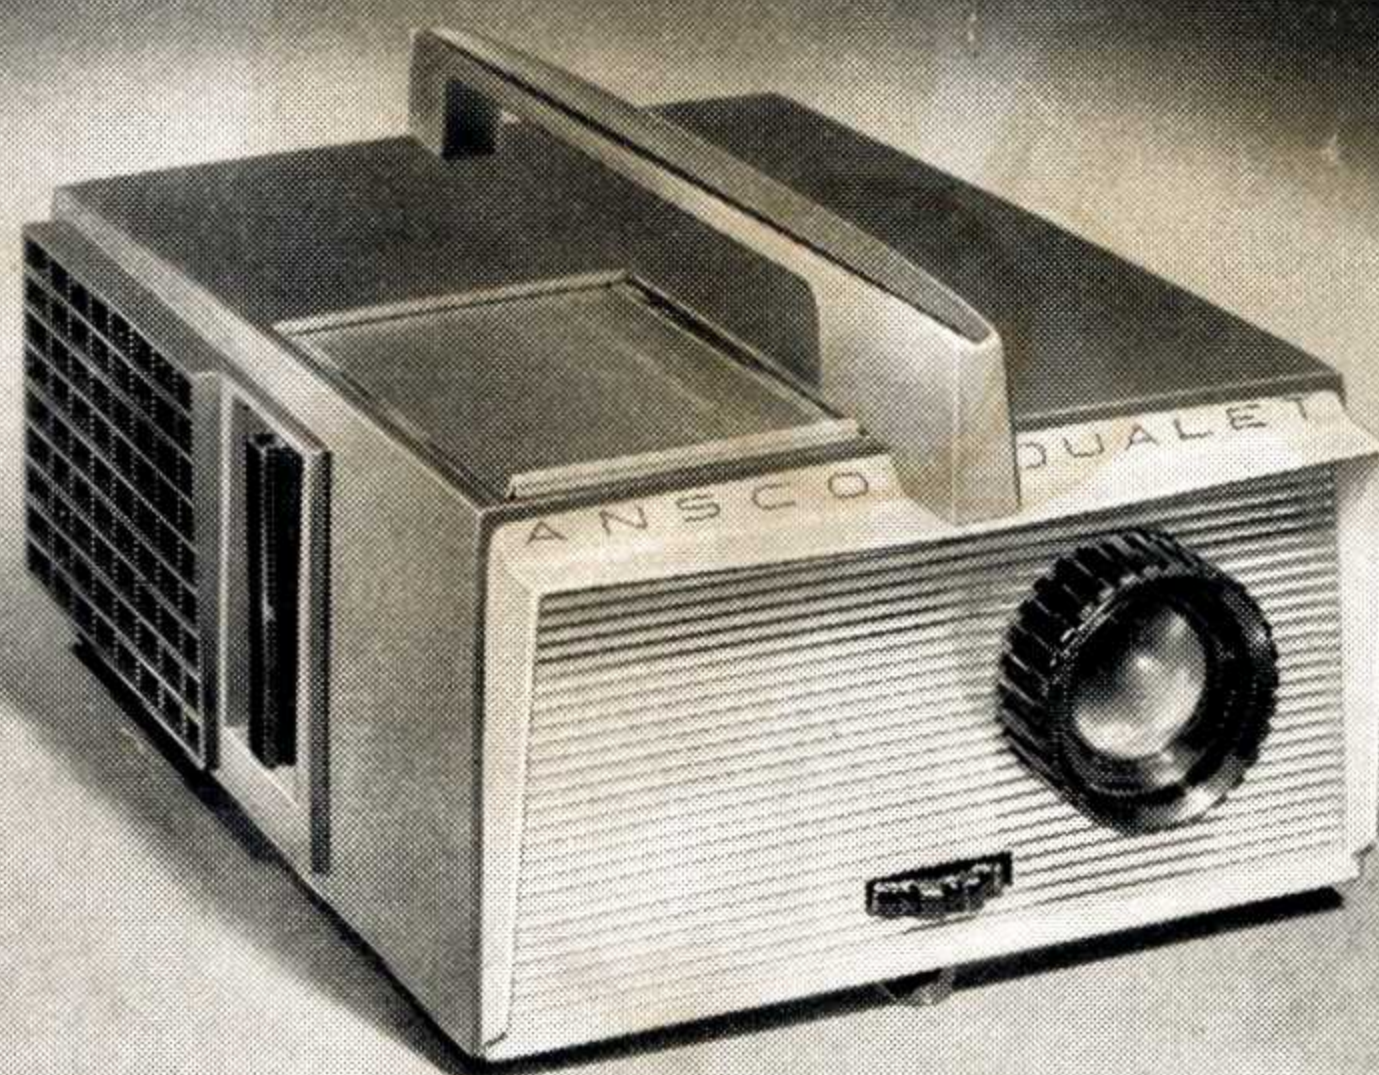

OPERATING INSTRUCTIONS FOR THE ANSCO DUALET PROJECTOR

Ansco Guarantee

This projector is manufactured from the finest quality materials and has been produced by highly skilled craftsmen. It is guaranteed by Ansco for a period of 12 months from date of purchase against defects due to workmanship or materials used in manufacture. Should anything go wrong, do not try to repair your projector. Take it to your photographic dealer. If not convenient to do so, send it to one of the Ansco Authorized Camera Repair Services or directly to Camera Repair Service, Ansco, Emma Street, Binghamton, New York.

 
Ansco

 
BINGHAMTON, NEW YORK • MADE IN U.S.A.

The Ansco Duallet projector will project both 35mm and 2 1/4" square transparencies. It is air-cooled to protect transparencies. It has a storage compartment which holds about 40 mounted slides.

Remove the lens barrel by turning it counterclockwise. Carefully clean the front and rear lenses with a soft, clean lintless cloth. Replace lens barrel. Remove packaging screw and wooden block from inside the projector (see special instructions on bottom of projector). While the bottom is off, check these items:

- ✓ Be sure the bulb is tightly in place.
- ✓ Be sure the condensing lenses and heat-absorbing glass are firmly in place. If the lenses are out of place, loosen the screws holding the spring clips, set the lenses in place, reposition clips and tighten the screws.

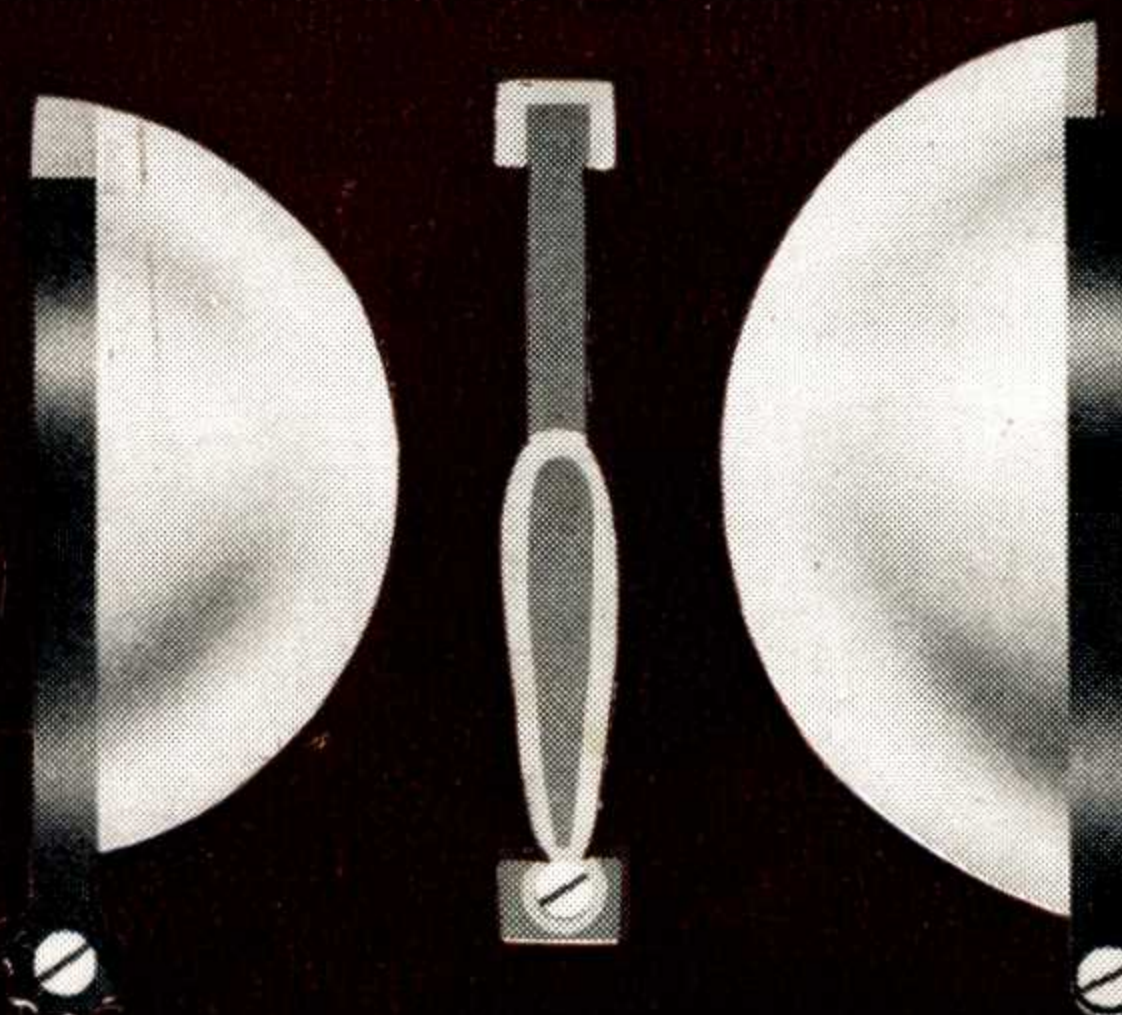

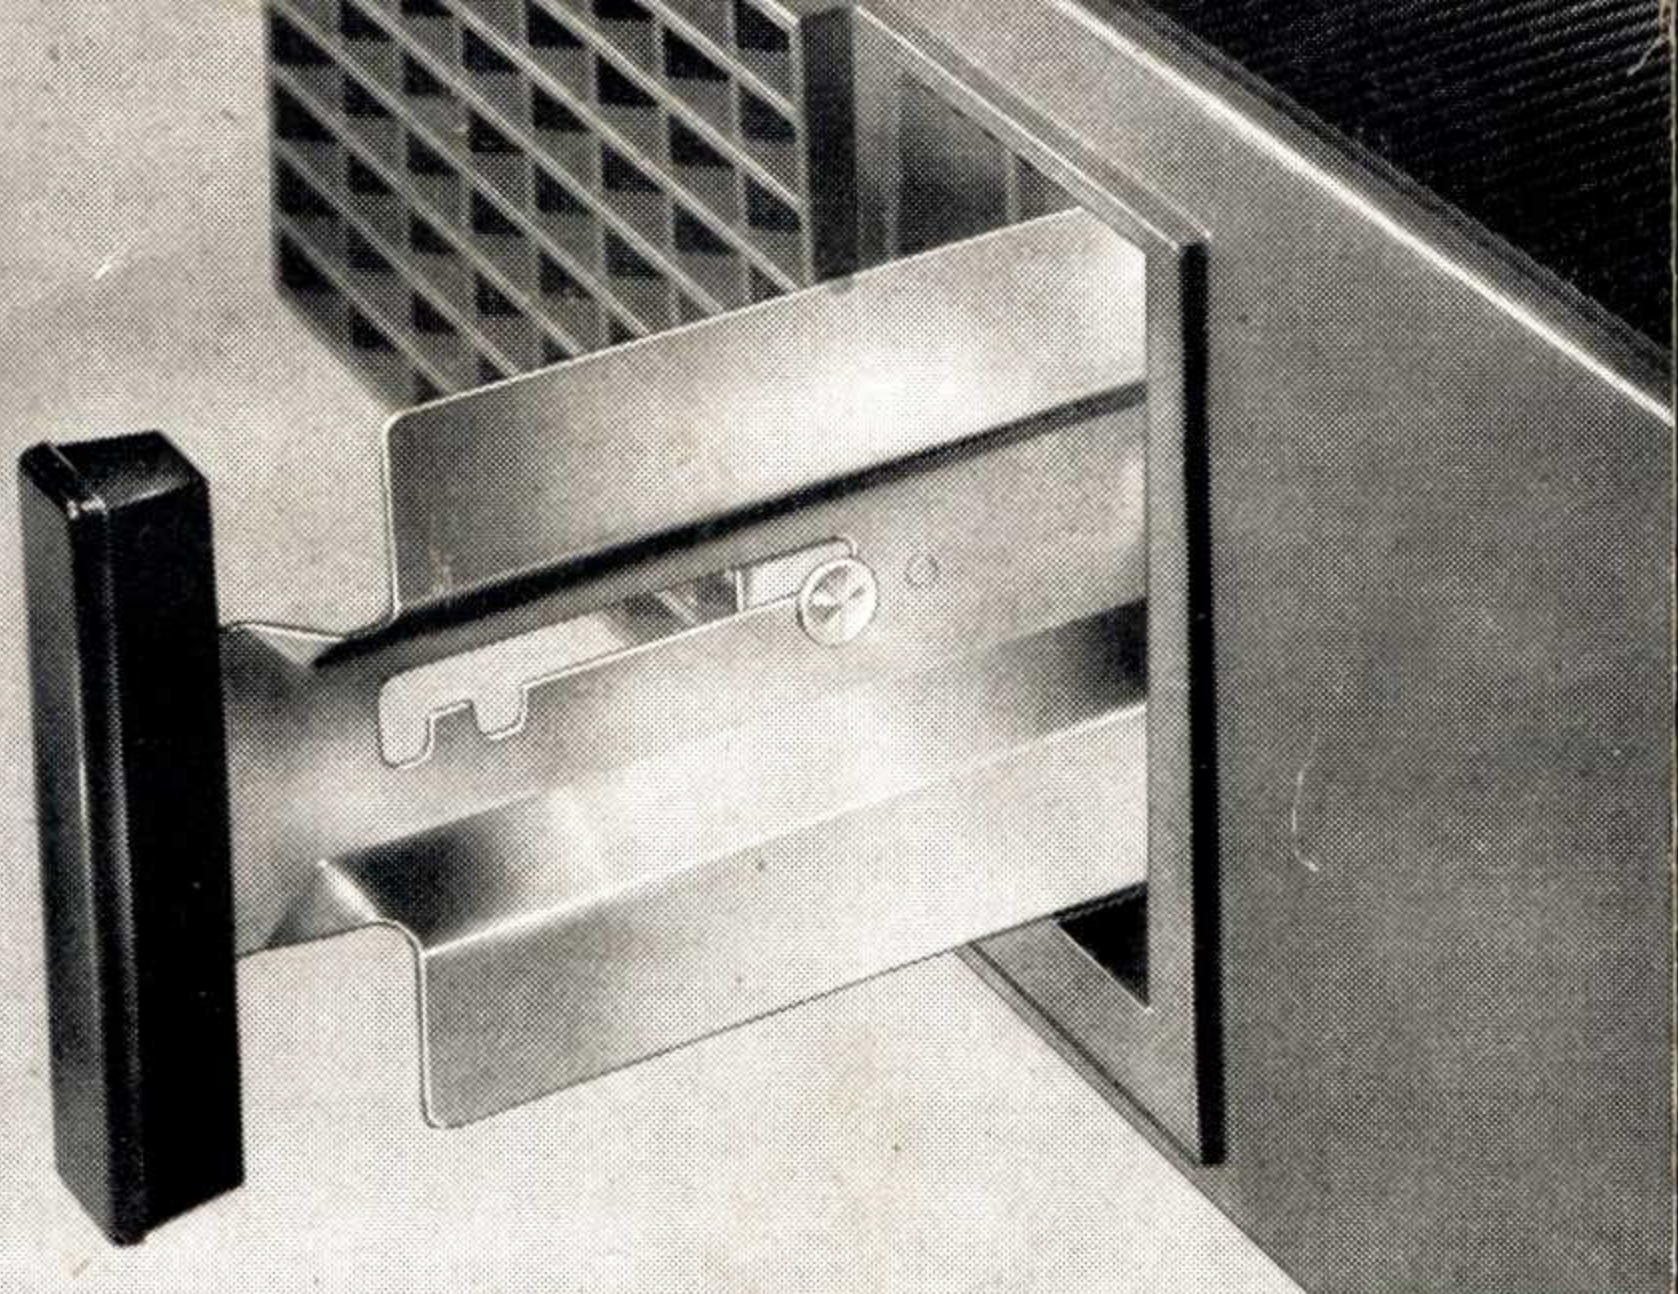

**POSITION #3 FOR REMOVING FINAL
2 1/4" SLIDE**

To replace the 35mm adapter, place the shift lock in slot #2. Fit edges of adapter behind springs in slide changer unit and with a slight forward pressure on the adapter, ease it into position.

AnSCO *Guarantee*

This projector is manufactured from the finest quality materials and has been produced by highly skilled craftsmen. It is guaranteed by AnSCO for a period of 12 months from date of purchase against defects due to workmanship or materials used in manufacture. Should anything go wrong, do not try to repair your projector. Take it to your photographic dealer. If not convenient to do so, send it to one of the AnSCO Authorized Camera Repair Services or directly to Camera Repair Service, AnSCO, Emma Street, Binghamton, New York.

AnSCO

BINGHAMTON, NEW YORK • MADE IN U.S.A.